

Quality Elevator Pads, LLC (203) 703-2954 qualityelevatorpads@gmail.com

## **Elevator Entrance Protection Kits**

All door frame pads are custom made with impact resistant vinyl elevator padding

Protect elevator door jambs from dents and scratches with an Entrance Protection Kit. Each kit includes two side door jamb pads, an elevator header pad, low-profile hanging system, and a convenient storage bag.

- → These kits are easy to install and provide unobtrusive protection to stainless steel and enamel coated steel door frames.
- → The low-profile hanging system uses velcro adhesive-backed loop and mating hook fasteners to quickly secure door frame pads to jambs and headers without getting in the way of tenants, furniture movers, maintenance workers, or construction crews.
- → Extra adhesive-backed fasteners are included for multiple installations.







Quality Elevator Pads, LLC (203) 703-2954 qualityelevatorpads@gmail.com

# **Elevator Entrance Protection Kits**

Submit measurements exactly as are measured. We'll adjust for proper clearance.

## 1. Jamb & Header Depth

Measure from the front edge of door jamb to elevator door. Left and right door jamb depths may be different if elevator has multiple doors. Make sure to measure both sides.

If elevator has multiple doors, measure the header depth from front edge of the header to each door. Record the smallest header depth.

#### 2. Wall Return Width

Measure from outside edge of wall return to the interior edge of elevator entrance. The vertical wall return width may be different than the header wall return width.

### 3. Jamb Pad Length

Measure from floor to the inside edge of header. Left and right jamb pads will be the same length.

## 4. Header Pad Length

Measure elevator entrance width from left door jamb to right door jamb.

#### 5. Remember

Record each measurement in inches.

